

Instructions: Picnic Basket Assembly



Step 1:

Make sure that you have all the parts as shown in the image above.



Step 2:

Unfold the basket by pushing the base down until the basket is fully expanded.



Step 3:

Insert provided plates into all four corner pockets.

That's it!

Instructions: How to fold it back



Step 1:

Remove plates from
all four corner
pockets



Step 2:

Pull the base
upward.



Step 3:

Fold both side
frames towards the
handle in the middle



Step 4:

Tuck in the side
flaps.

That's it!